

DIRECTV UNIVERSAL REMOTE INSTRUCTIONS

Program Universal remote for an HD DVR or HD receiver

1. Press **MENU** on your remote.
2. Select **Settings > Remote Control > Program Remote**.
3. Choose the device (TV, audio, DVD) you wish to program. If you don't see your TV or device listed, use the [code lookup tool](#) to find the 5-digit code.
4. Follow the on-screen prompts to complete programming.

Program Universal remote for a Standard DVR or SD receiver

1. Press **MENU** on your remote.
2. Select **Parental Favs & Setup > System Setup > Remote or Remote Control > Program Remote**.
3. Choose the device (TV, audio, DVD) you wish to program. If you don't see your TV or device listed, use the [code lookup tool](#) to find the 5-digit code.
4. Follow the on-screen prompts to complete the programming.

Program Universal Remote to Television

Using Scan Mode:

1. With the television turned on, push the slider at the top of the DIRECTV remote to TV.
2. Press **MUTE** and **SELECT** at the same time until the green light blinks at the top of the remote.
3. Press **9, 9, 1**.
4. Wait for the remote to blink and press **1** again.
5. Press the channel up button until the television turns off.
6. Once the television turns off, press the **SELECT** button to store the television code.
7. Push the slider at the top of the remote back to the DIRECTV symbol.
8. Test the functionality of the remote control by using it to turn the television on, change the volume and change the channel.